


Some platters have been shipped with installed spacers (adapter mounts) on their undersides at all four corners. These specially-configured platters are provided for customers wishing to add an adaptive scale to their unit at a later date. Until such time as the adaptive scale is installed, the four spacers should be left in place to ensure that the platter rests evenly at its correct height when positioned on the scanner.

### Removal

To remove the spacers, loosen and remove the single screw for each as shown below.

Removing/Installing the Platter Adapter Mounts

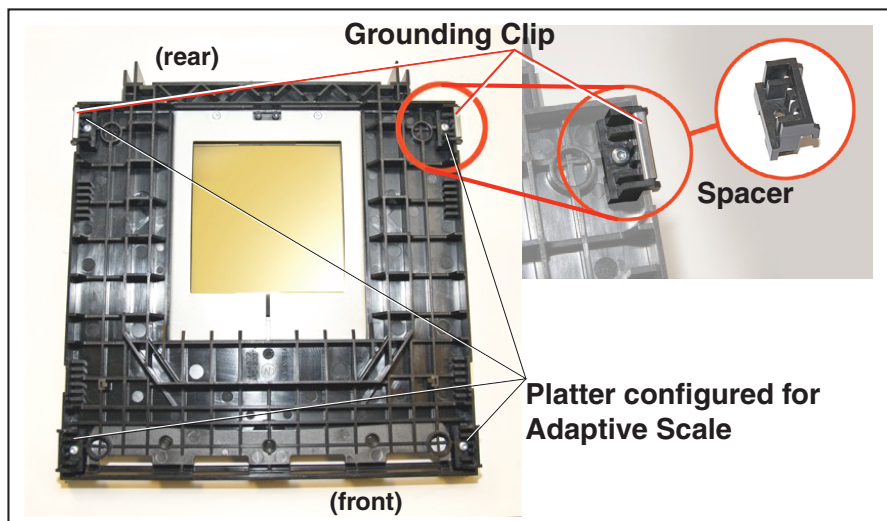

### Installation

Attach the platter adapter mounts using the provided screws, then slip the two grounding clips onto the rear adapter mounts as shown in the illustration. (The front adapter mounts do not require grounding clips.)

